


Cineped / Rotational Slider Set Up

1 Structure



2 Mounting a slider on Quatro

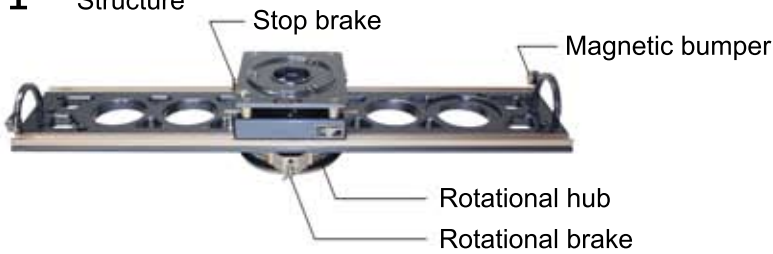

- Hold the Slider by placing the hands at 'Hold here' sign.
- Place the Slider on Quatro into the **key-way**.
- Tighten the knob** to secure the Slider.
- Slide the sliding platform to both ends and check the bubble level. If the bubble is not level, adjust 2 legs.

3 Mounting a fluid head



- Before mounting the fluid head, check that all 4 legs are well balanced.**
- Slide the sliding platform to one end of the Slider and mount a fluid head.

4 Mounting a camera



- Once the fluid head is mounted, bring back the sliding platform into the middle and then mount the camera

Safety

- Do not hold sliding platform but hold at 'Hold here' sign.
- Camera on the rotational slider must stay with in the range of the legs, otherwise it will tip over.



- Safety level of leg positions with the slider
 - 0 degree - **Dangerous**
 - 15 " - **Dangerous**
 - 30 " - Minimum safety
 - 60 " - Very safe
 - 45 " - Safe
 - 75 " - Very safe
 - 90 " - Very safe

Dis-assemble

- Remove the camera from the middle position and then slide the platform to the side to dismount the fluid head.
 - After dismounting the fluid head, bring the sliding platform to the middle and loosen the bottom knob.
- Hold the Slider at 'Hold here' sign and put it in the carrying case.
 - Stop brake and rotational brake should be applied in the middle position before the slider goes into the carrying case.

Maintenance

- Clean the inside of the sliding rail with a fine cloth and lubricant oil after every use. (Recommended: Sprayon Lubricant S00711)

For further questions
please call (310) 533-6900

www.cineped.com